


TEMPLATE FOR INSTALLING

LATCH

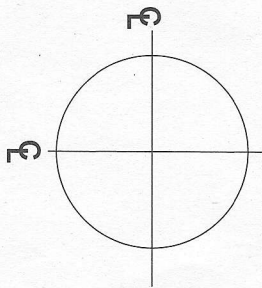

MARK CENTER OF DOOR THICKNESS FOR 1" DIA HOLE

DETACH HERE

HIGH BEVEL

HIGH BEVEL

FLAT NO BEVEL

LOW BEVEL


LOW BEVEL

MARK CENTER FOR 3/8" HOLES

NOTE: Do not drill these holes for non thru bolt installation.



MARK CENTER FOR 2 1/8" HOLE

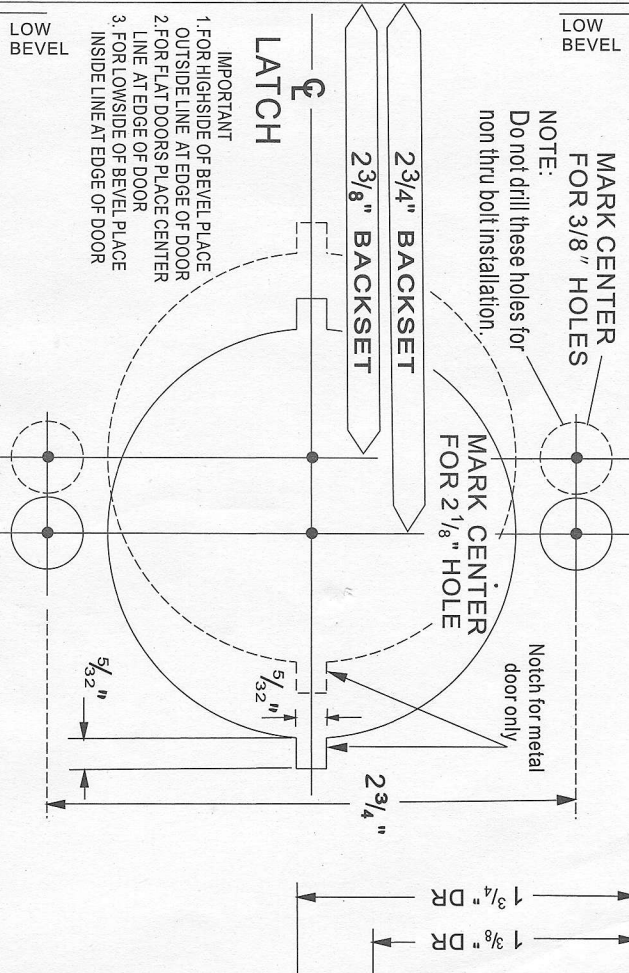

LATCH

IMPORTANT

1. FOR HIGH SIDE OF BEVEL PLACE OUTSIDE LINE AT EDGE OF DOOR
2. FOR FLAT DOORS PLACE CENTER LINE AT EDGE OF DOOR
3. FOR LOW SIDE OF BEVEL PLACE INSIDE LINE AT EDGE OF DOOR