

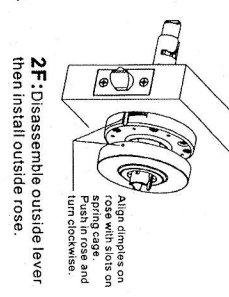
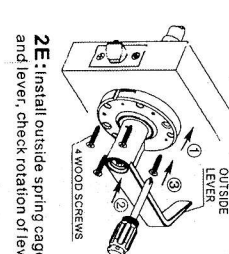
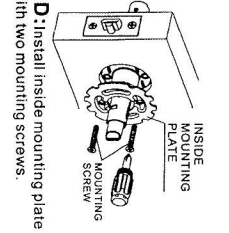
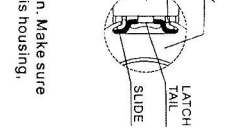
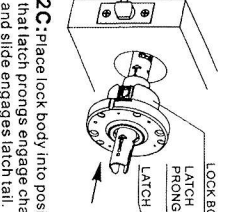
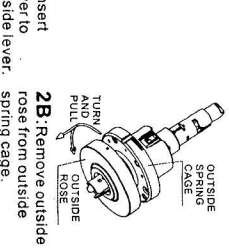


## 2 DISASSEMBLE OUTSIDE FOR ONE-HOLE DOOR INSTALLATION OR CYLINDER REPLACEMENT

### one-hole-door installation

1. new lock on a new one-hole-door.
2. old lock replacement on an old one-hole-door follow steps 2A to 2H.
3. hole-door gate step 2A directly.



### 3-hole-door replacement

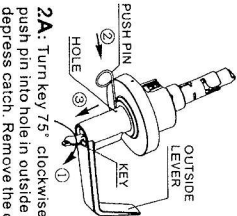





All special steps for one-hole-door are completed. Go to step 4A for subsequent installation steps.

Step 3A to 3B is for 3-hole-door installation. For one-hole-door skip 3A and 3B, go to step 4A.


## 3 INSTALL LOCK BODY AND OUTSIDE TO DOOR

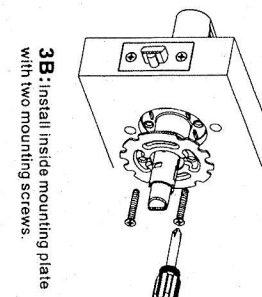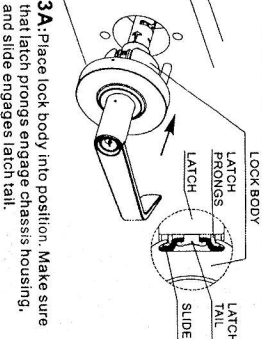

## 4 INSTALL INSIDE

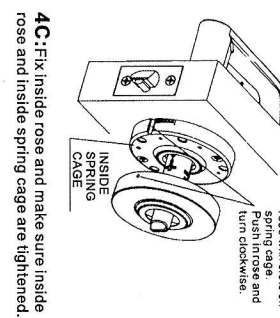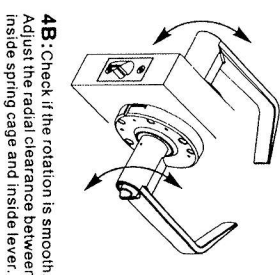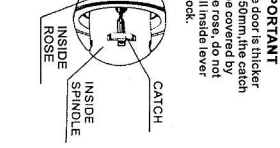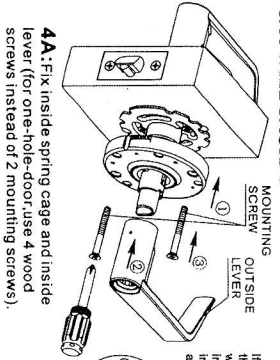

## 5 INSTALL STRIKE

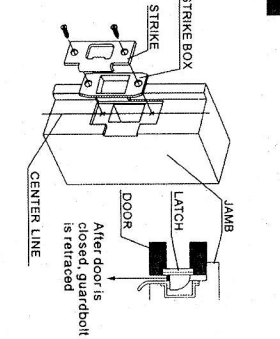

**IMPORTANT**  
If the door is thicker than the door shown, the catch will be covered by inside rose, do not install inside lever and lock.

Align dimples on rose with slots on spring cage and push in rose and turn clockwise.

After door is closed, shoulderbolt is retracted.